


RPL-5301-A PLATE-LOADED CHEST PRESS

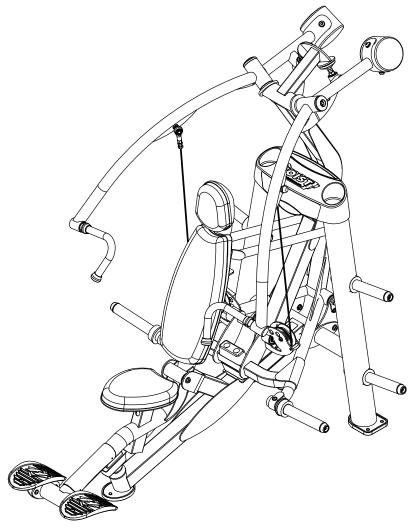

WARNING!

TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts RECORD SERIAL NUMBER HERE <u>Customer Service</u>

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558

A08

MACHINE CODE

www.facebook.com/hoistfitness

CONTENTS

INSTRUCTIONS	02
FRAME ASSEMBLY	04
MACHINE ADJUSTMENT	24
PRE-ASSEMBLY	26
DECAL PLACEMENT	27
DECAL REFERENCE	28
PART LIST	31
ABBREVIATIONS	34
BOLT SIZING CHART	35
WASHER SIZING CHART	36
MAINTENANCE SCHEDULE	38
GENERAL MAINTENANCE INFORMATION	39
WEIGHT TRAINING TIPS	40
EXERCISE LOG	41
LIMITED WARRANTY	42

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet


Tape Measure


Level


Hex Key Wrench Set


Two People


THIS PAGE WAS INTENTIONALLY LEFT BLANK

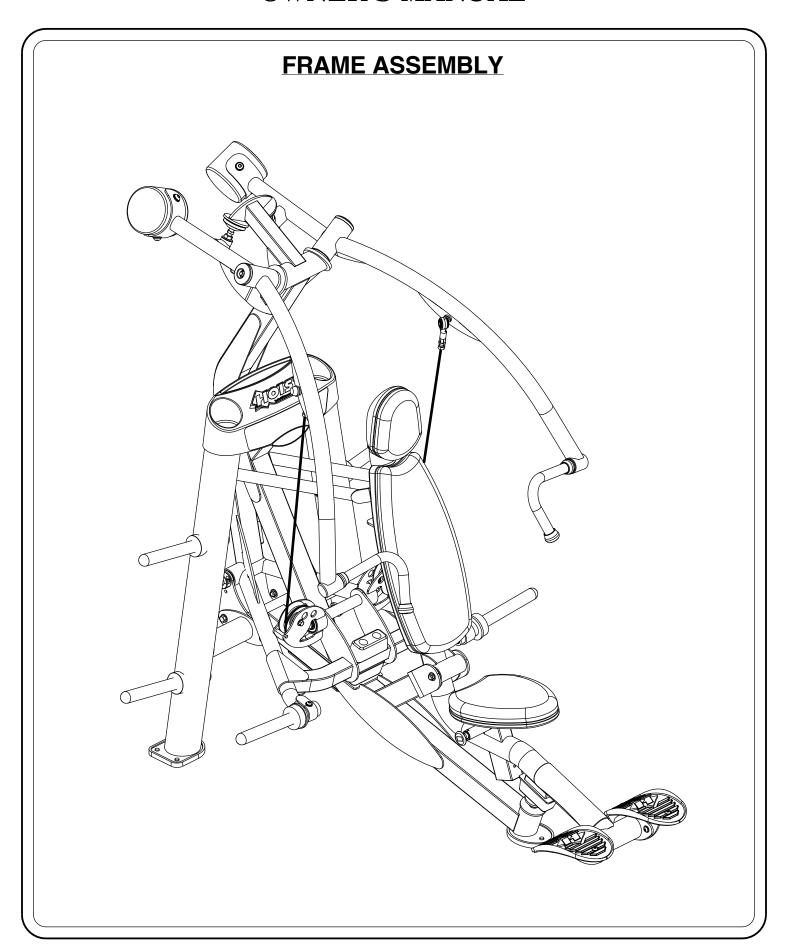


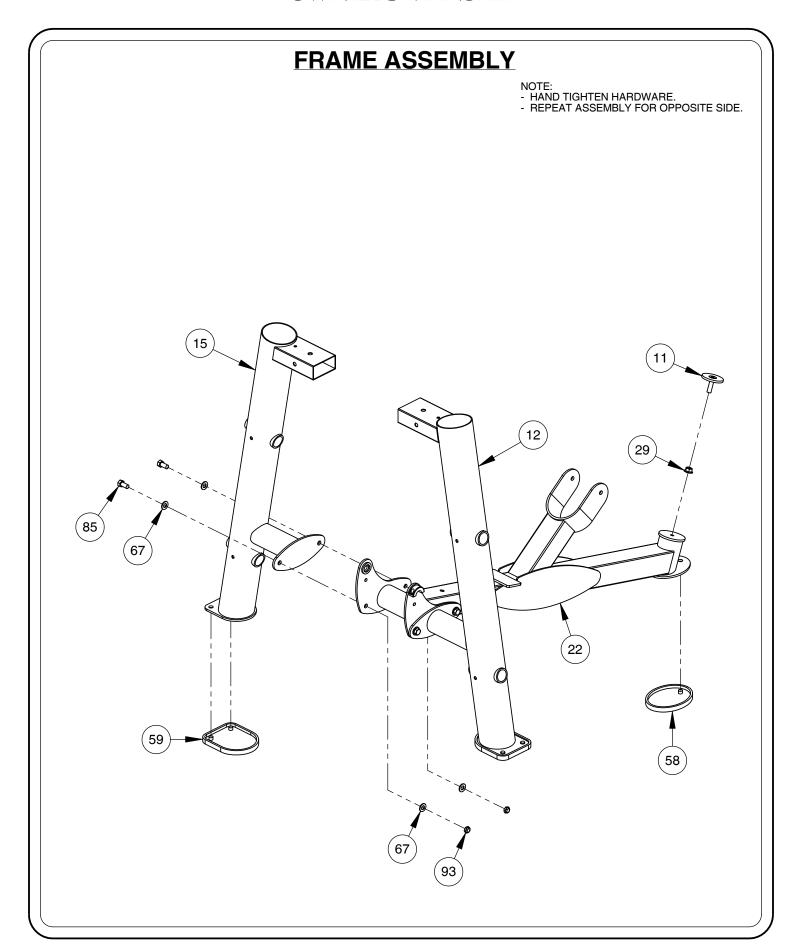


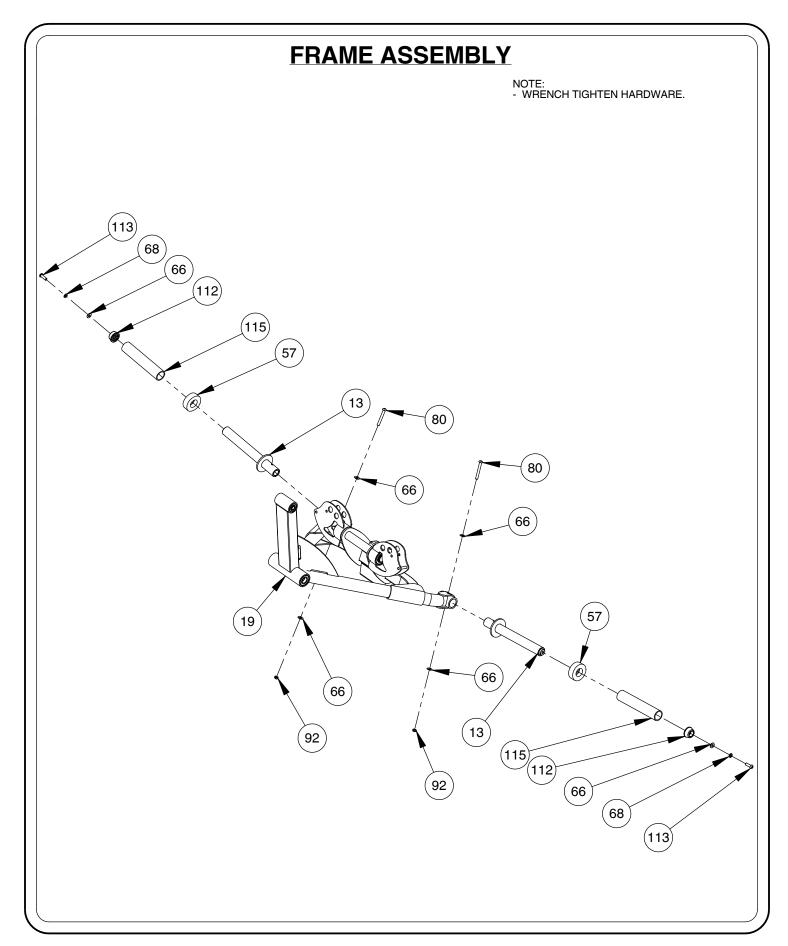


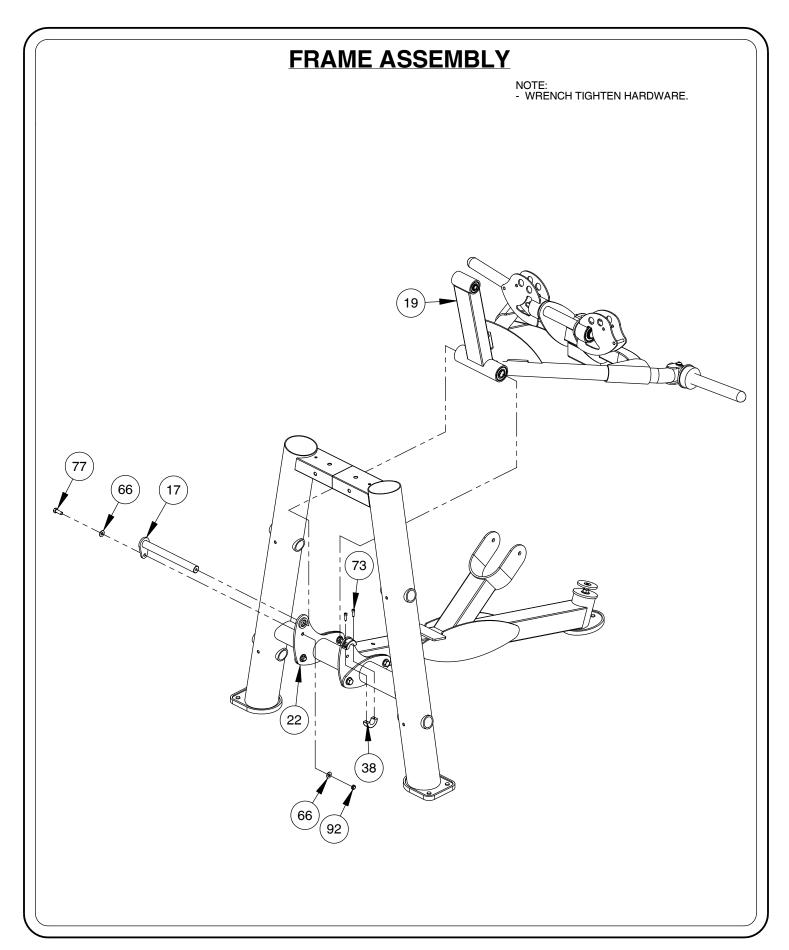


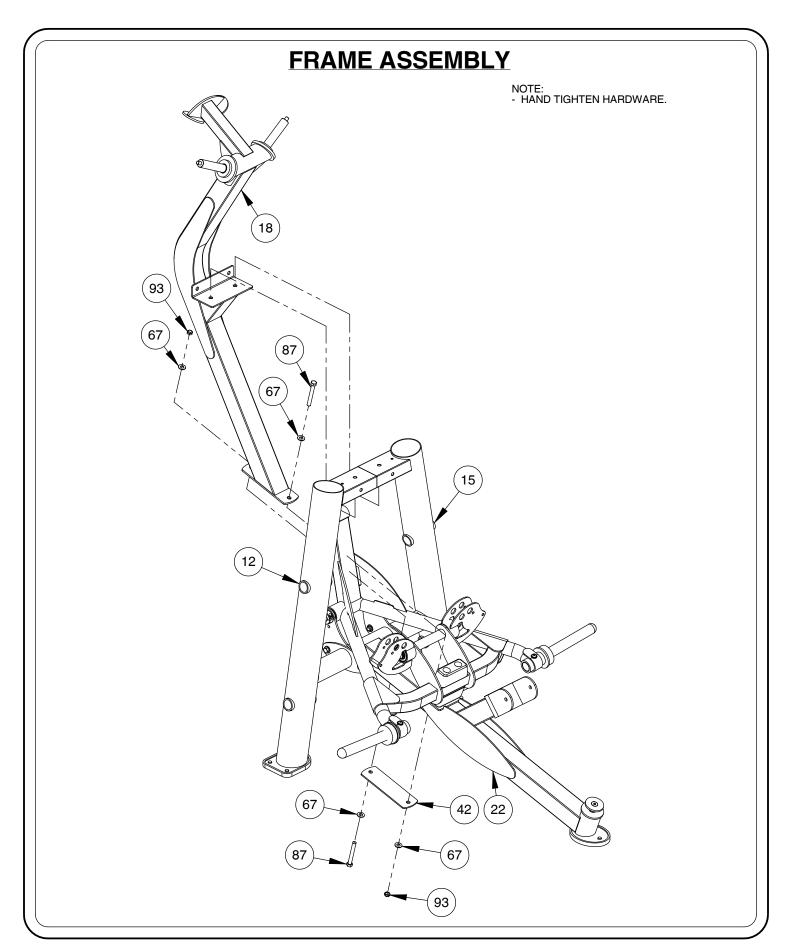


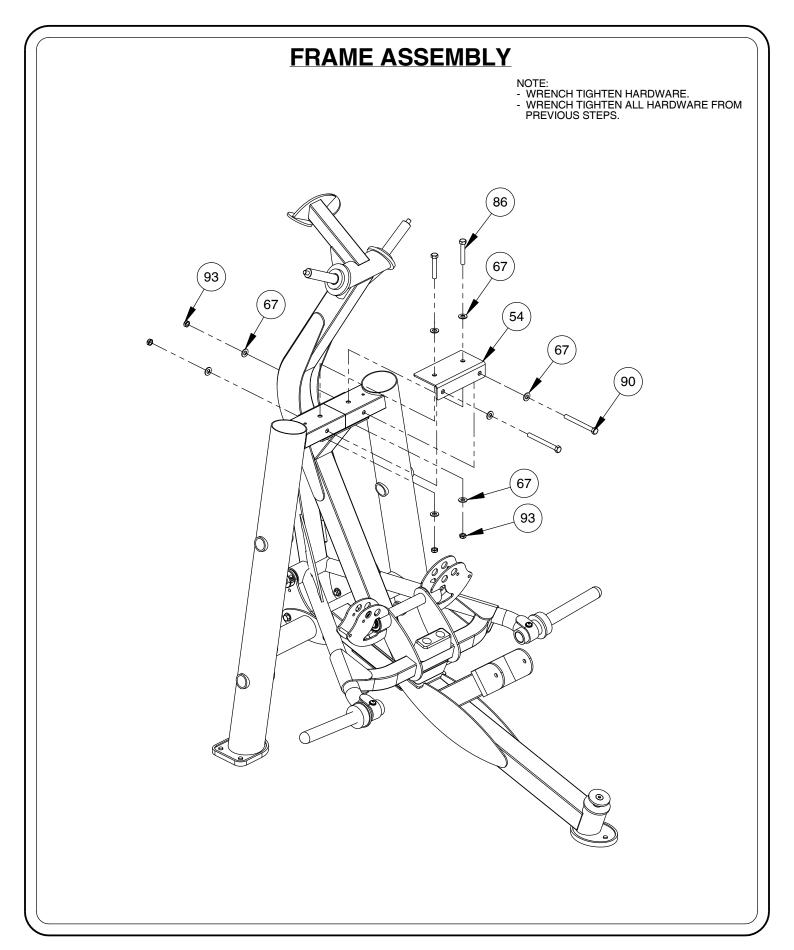


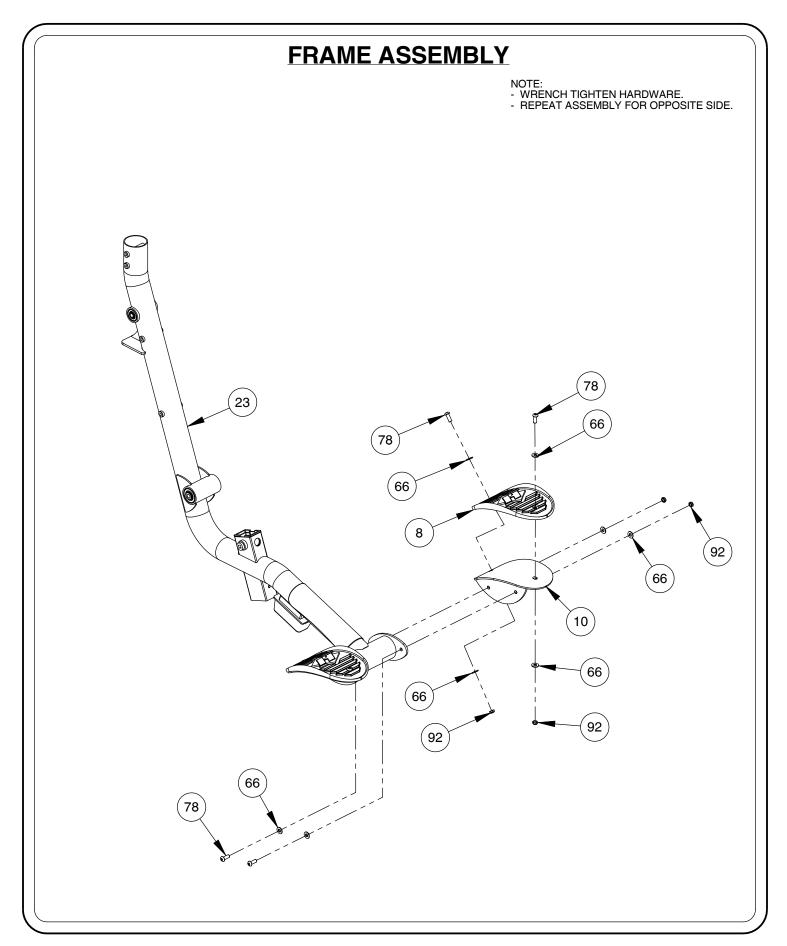


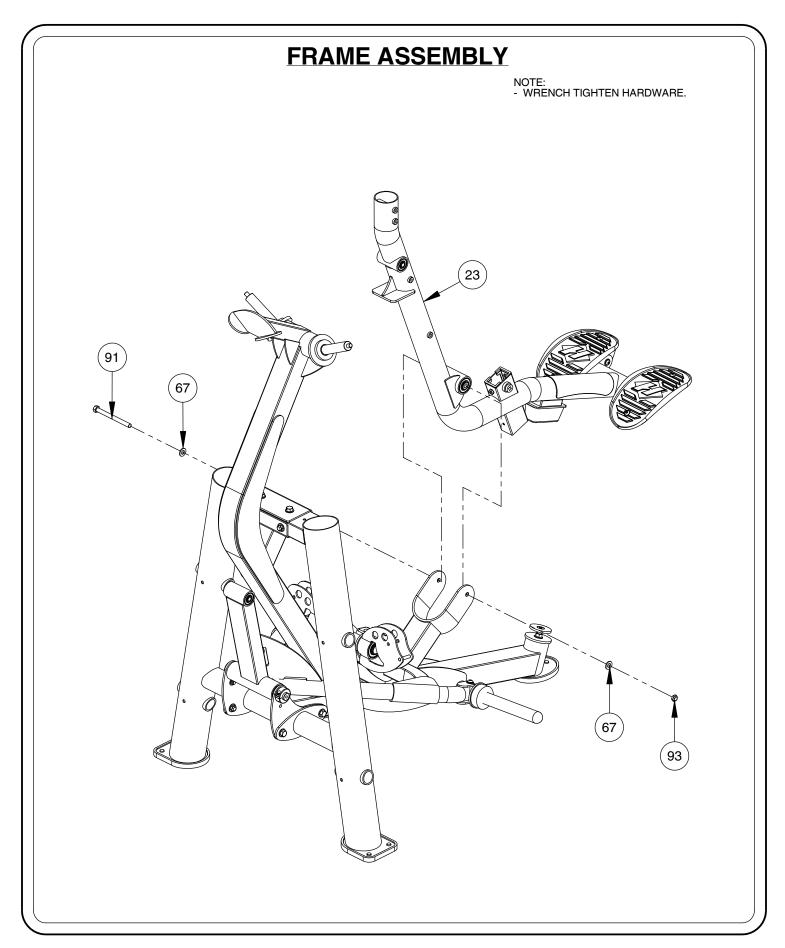


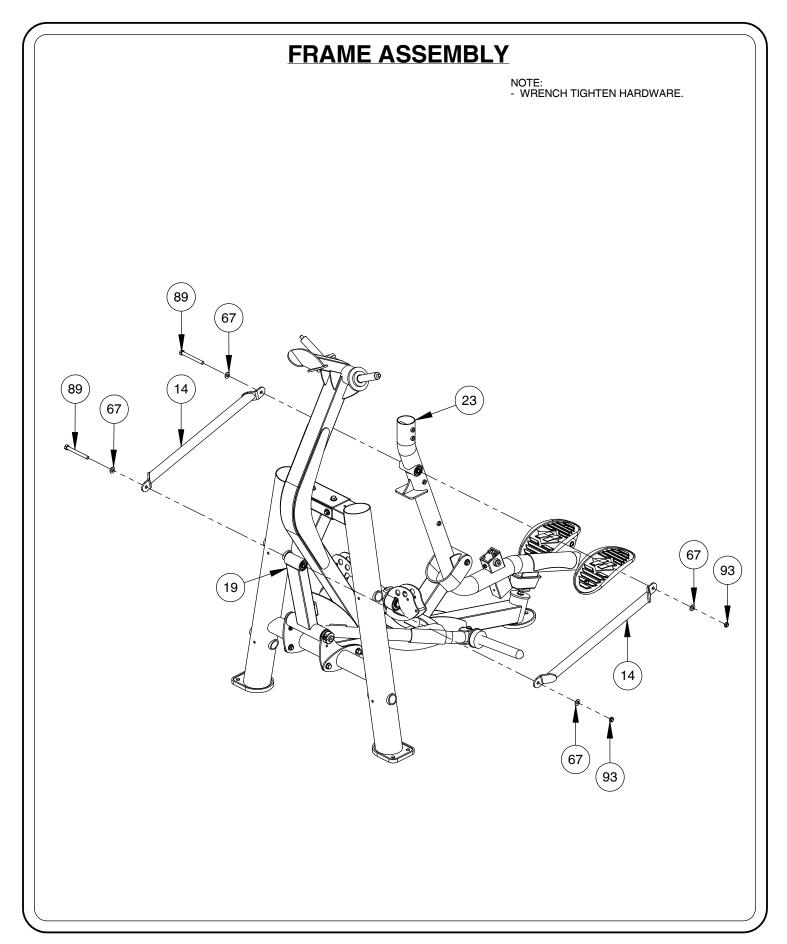


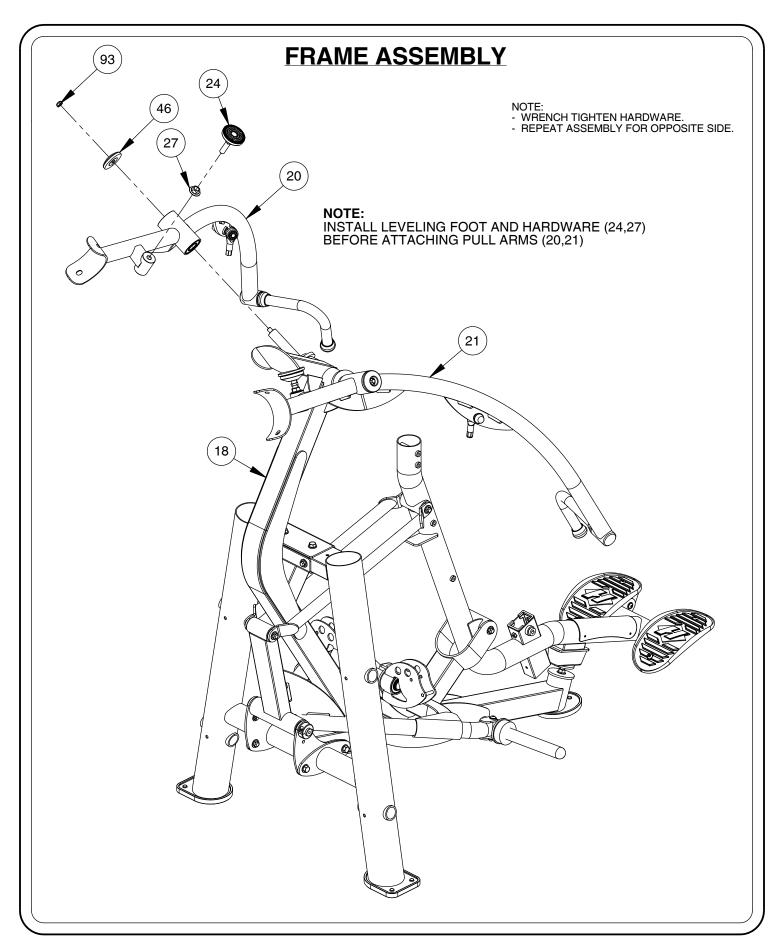


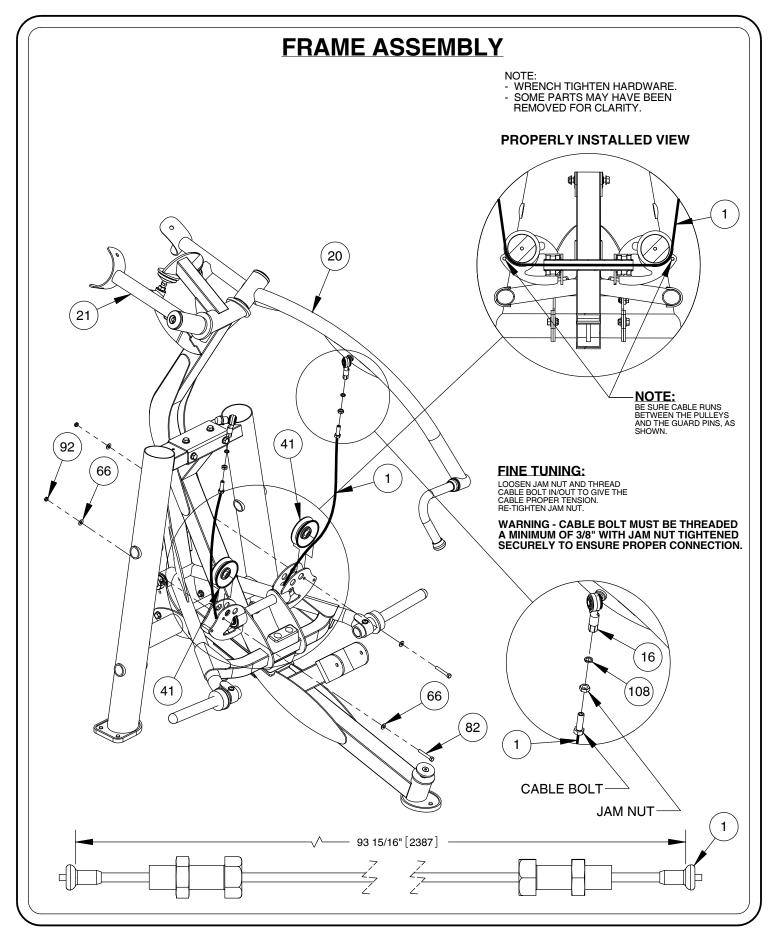


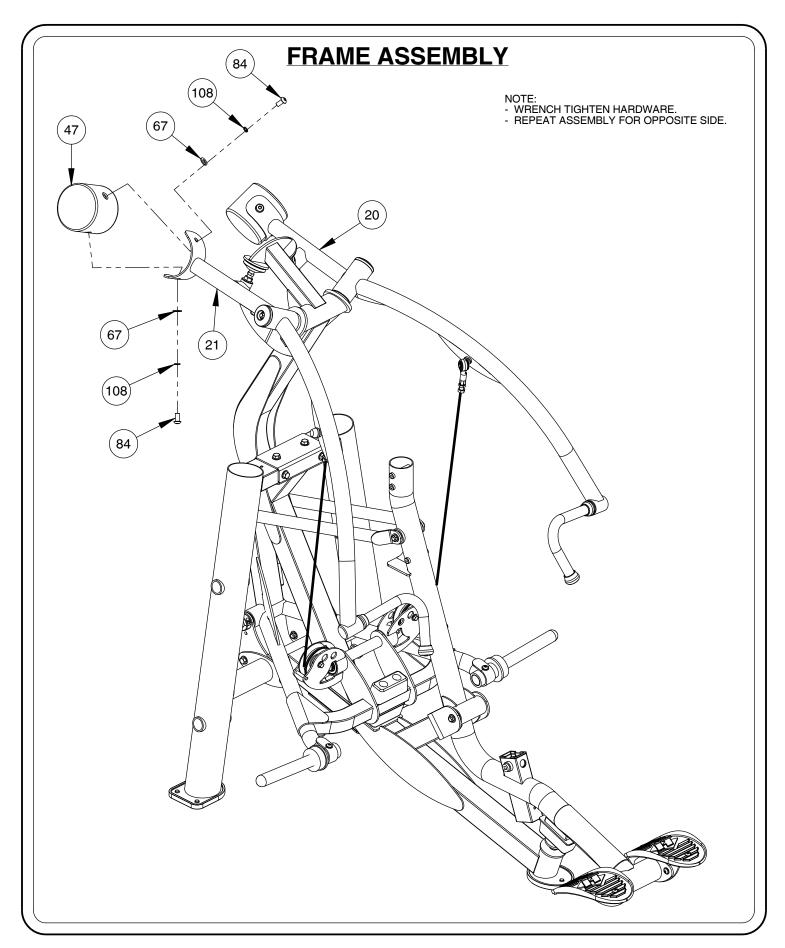


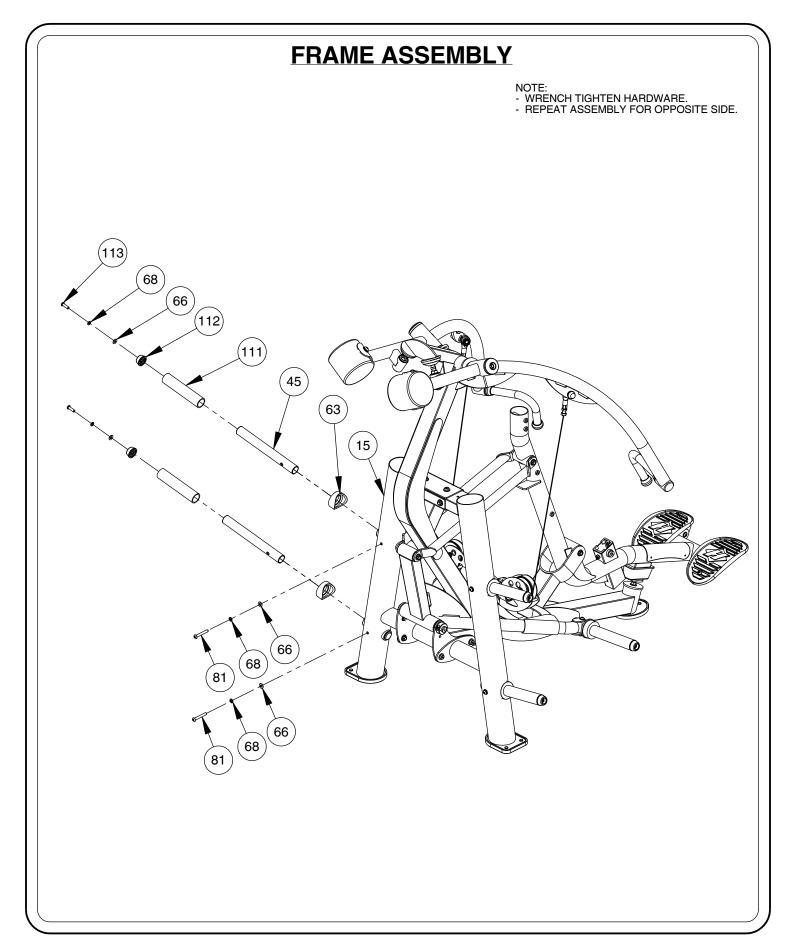


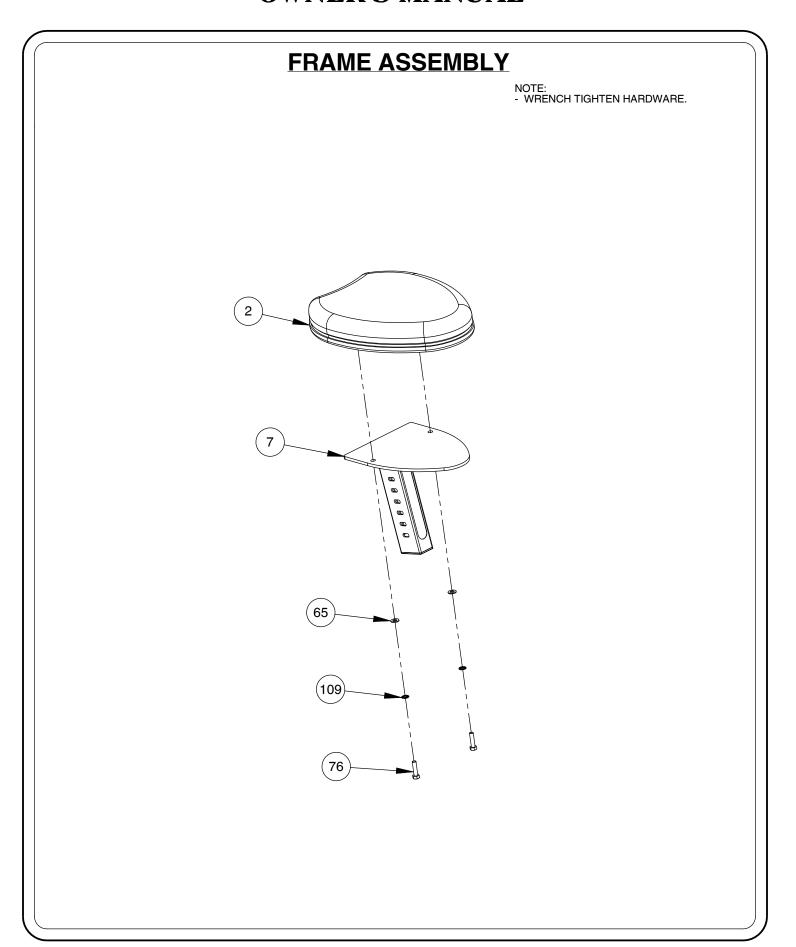


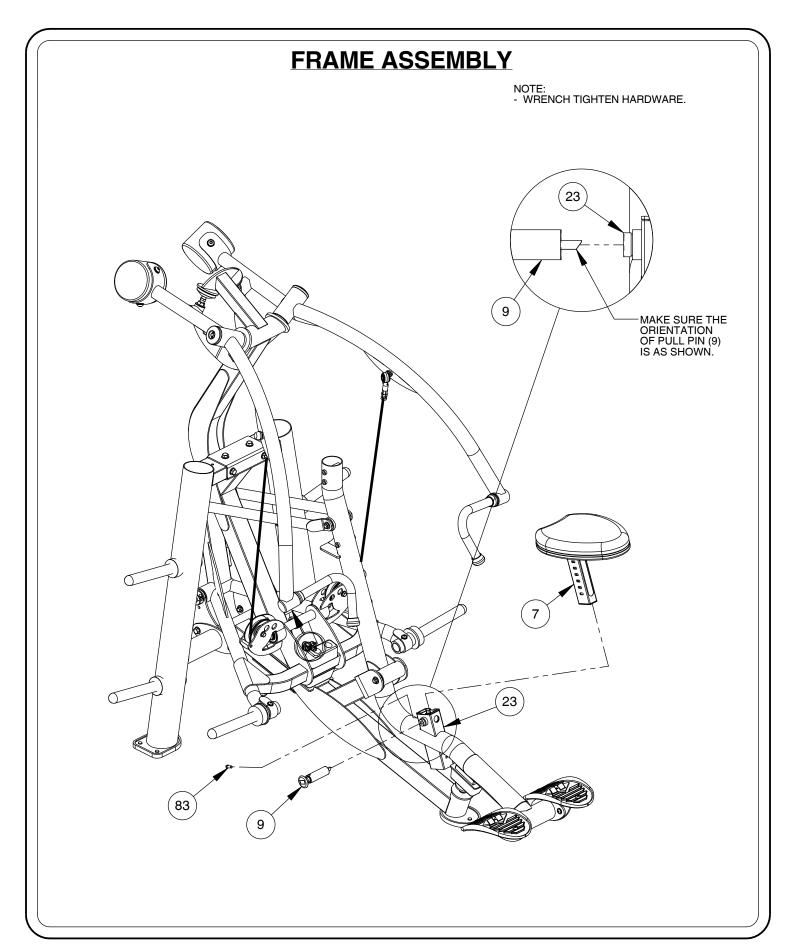


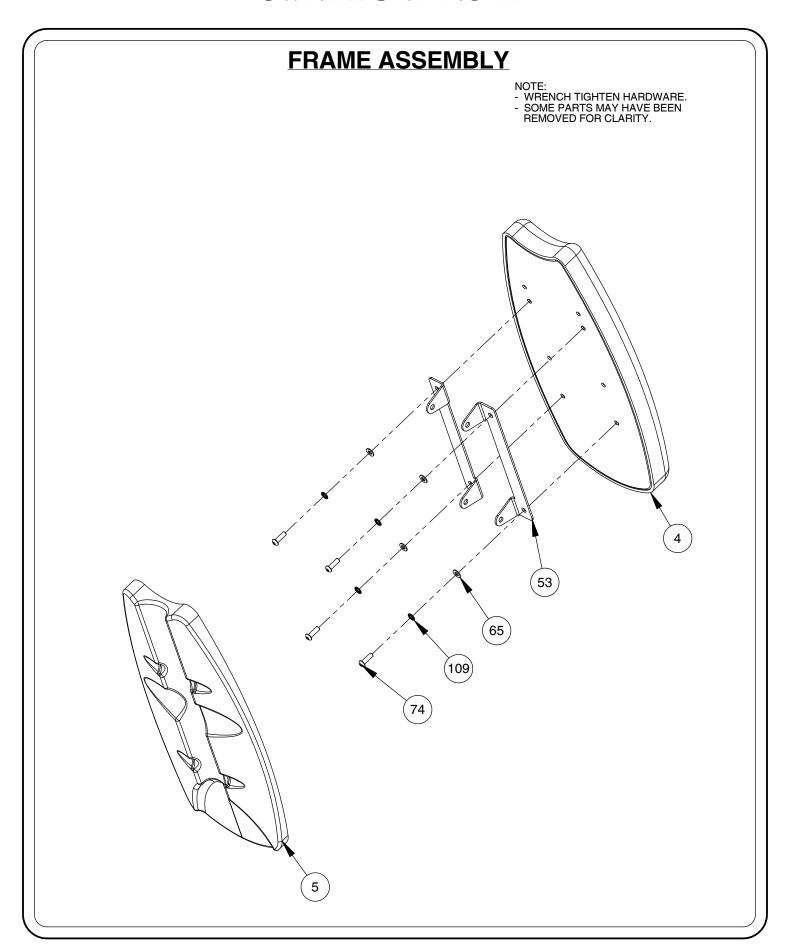

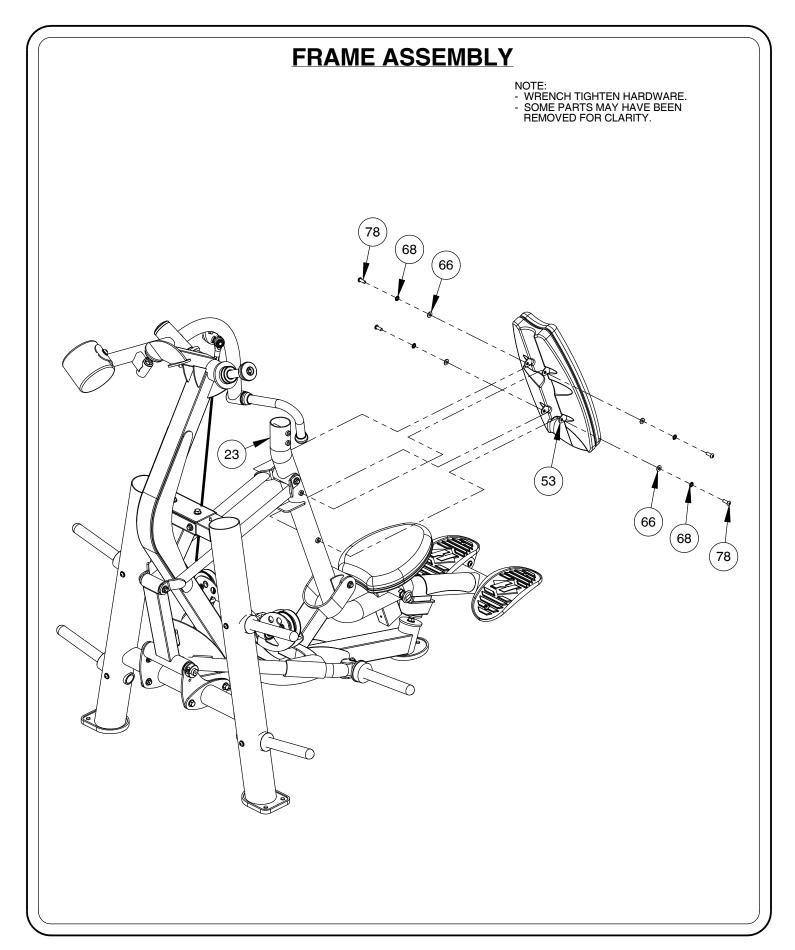

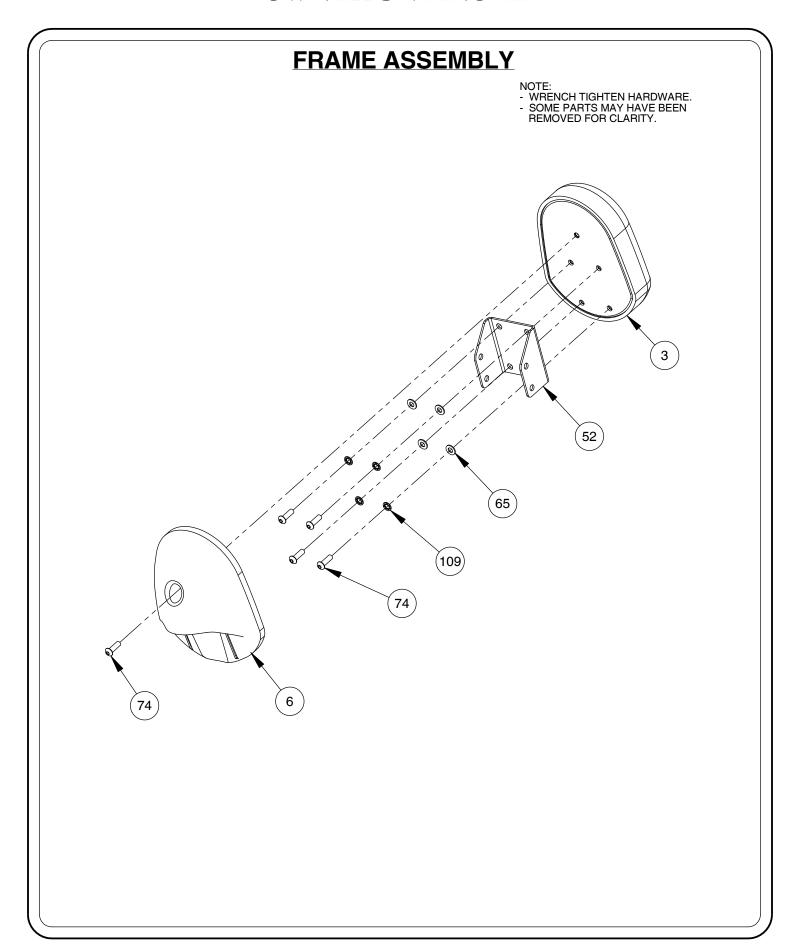


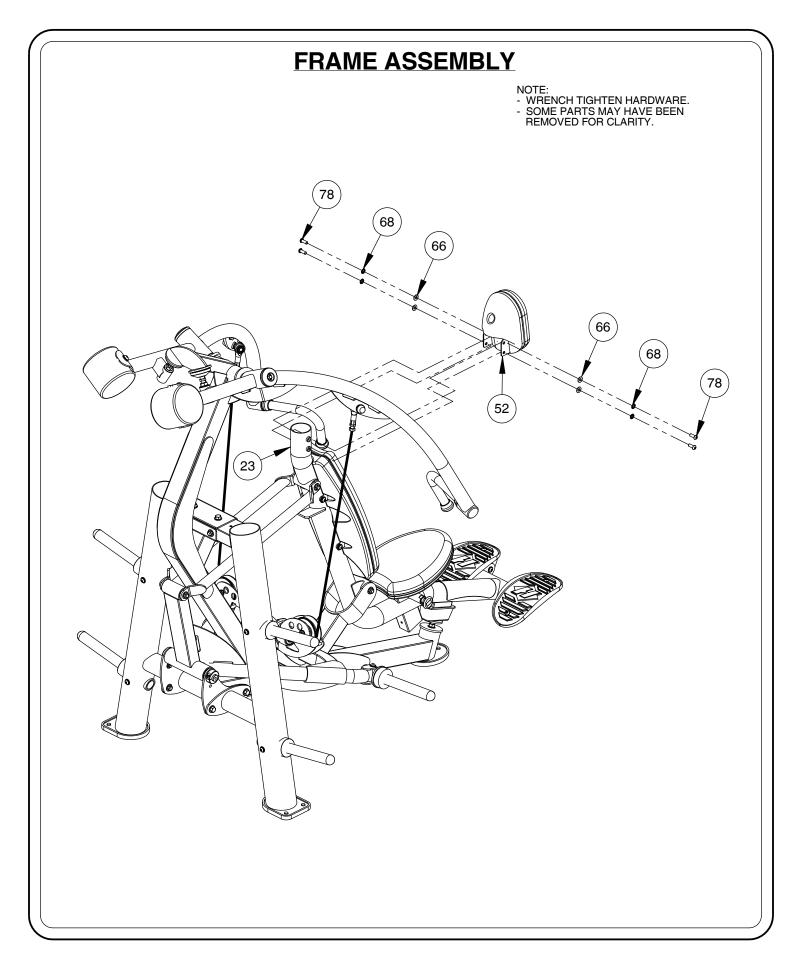

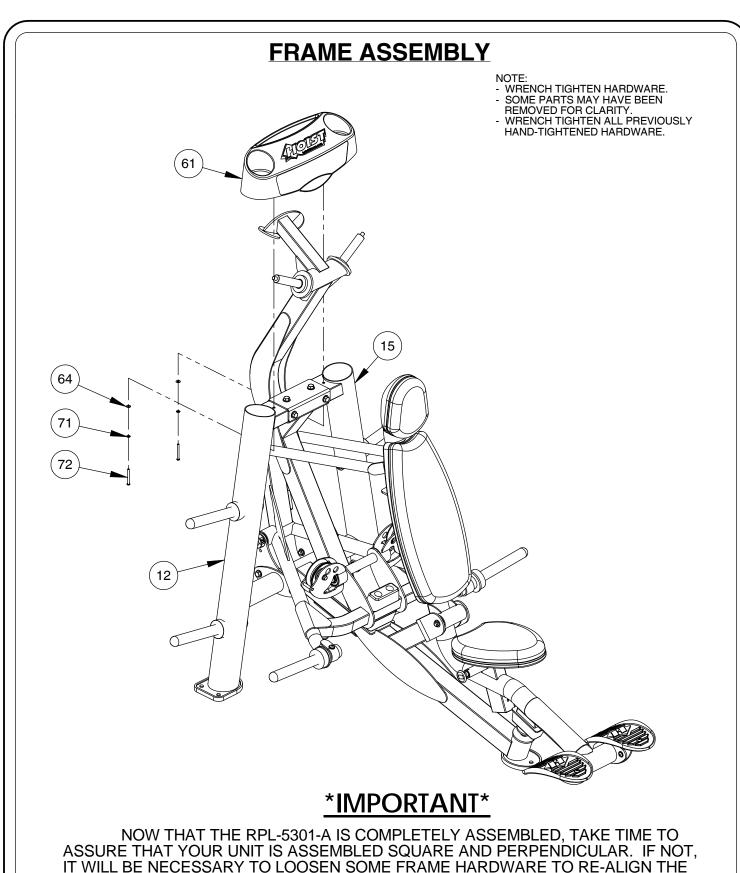

RPL-5301-A ASSEMBLY

FRAME AND RETIGHTEN BOLTS.

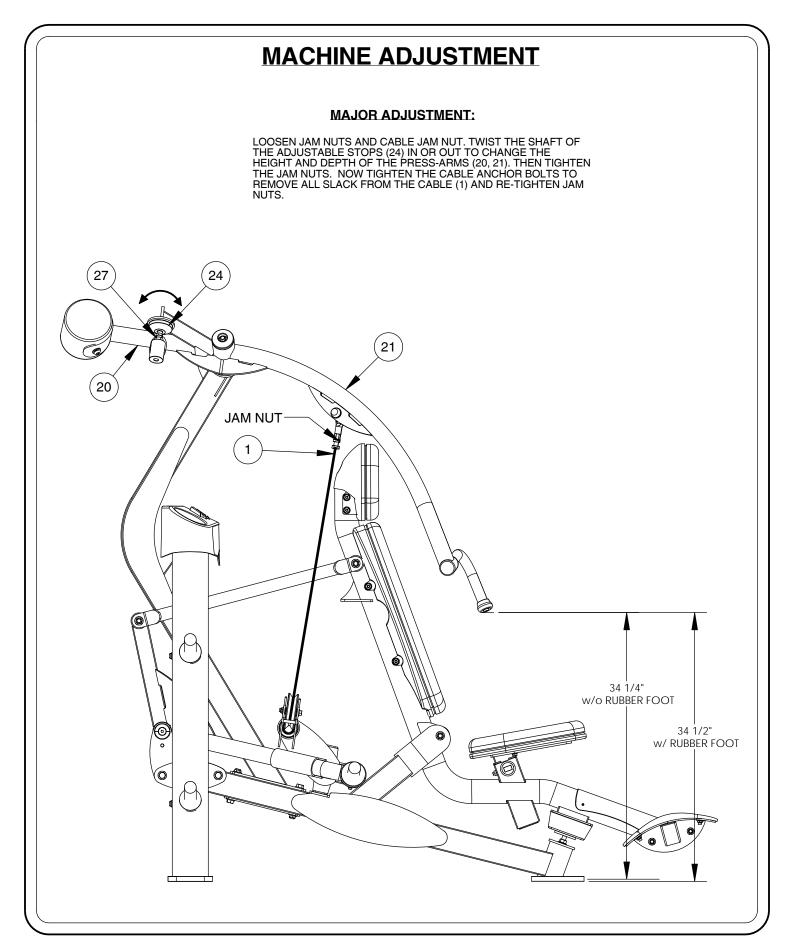

MACHINE ADJUSTMENT CONTINUED


MAJOR ADJUSTMENT:


STEP 1:


BE SURE THE BOTTOM DUAL HOLE BUMPER (62) OF THE LIFT ARM ASSEMBLY REMAINS IN CONTACT WITH THE BASE FRAME ASSEMBLY (22), AS SHOWN.

STEP 2

ADJUST HEIGHT OF THE LIMITING STOP ASSEMBLY (11) SO THAT IT IS IN CONTACT WITH THE DUAL HOLE BUMPER (62), AS SHOWN. ONCE THE LIMITING STOP IS PROPERLY ADJUSTED, WRENCH TIGHTEN JAM NUT (29).

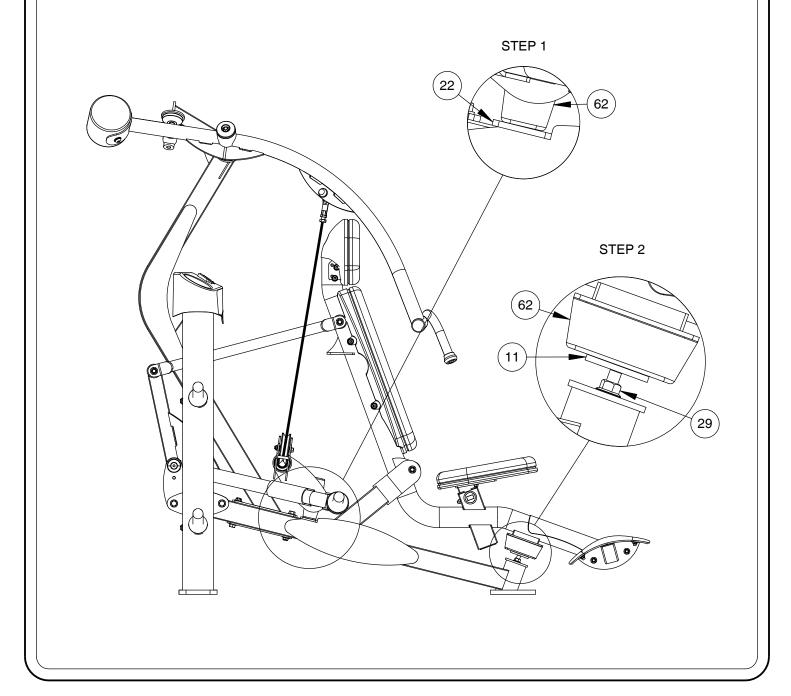

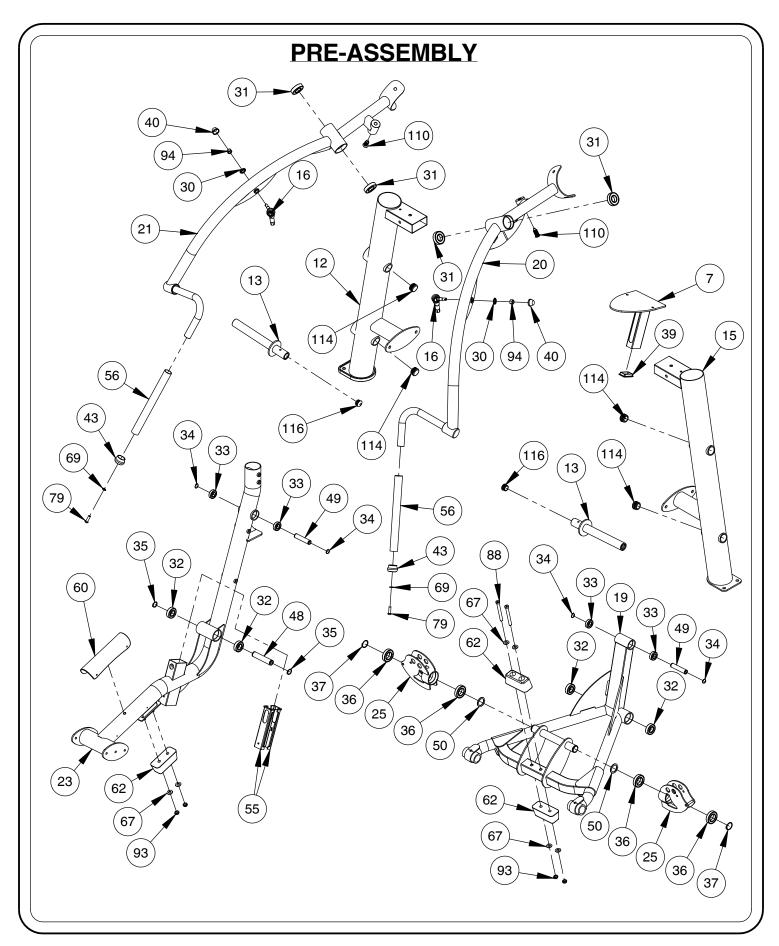

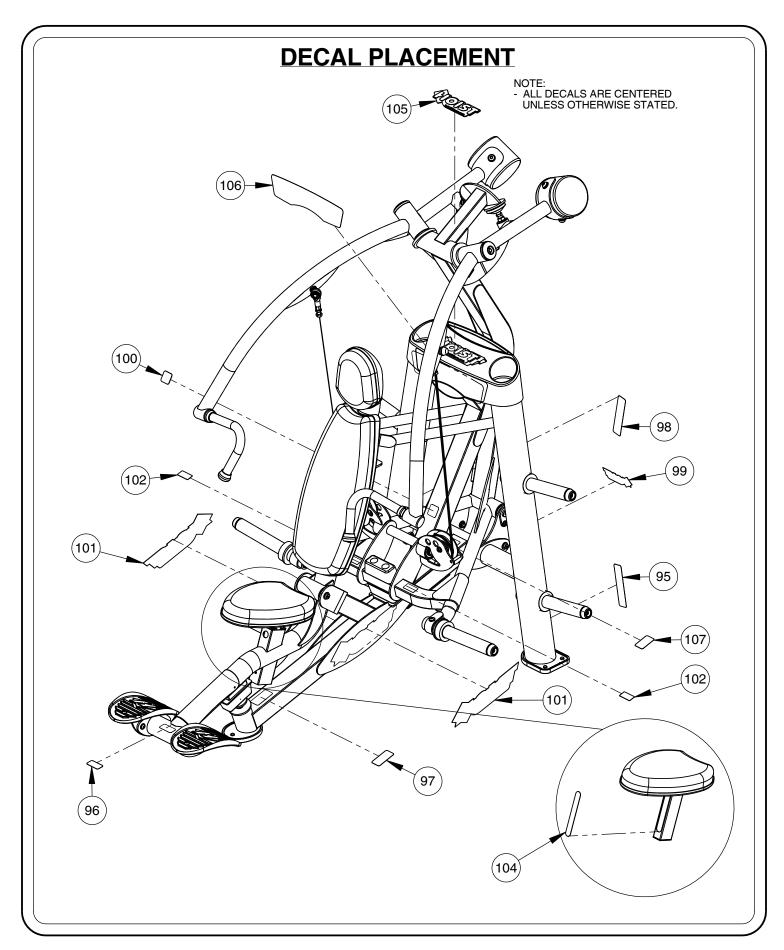

DECAL REFERENCE



021-0003341



WARNING

800 LBS.

MAXIMUM
WEIGHT RATING

021-0003320



021-0003113



021-0003093

RED BUY SENINE HOIST

BEY ACCEST PARTS FALLRE TO

DO SO WILL YOU WARRANTY AND

RICH FESSUL IN PRESIDE

RICH SESSURED BY INDUDIALS

WAS ASSUMED BY INDUDIALS

TO MANIMER THE RISK ALMYN'S

EACLOW THESE SIMPLE RULES

I. READ AND UNDERSTAND ALL

EACH USE BROLES BY WART OF

CALLOW THESE SIMPLE RULES

I. READ AND UNDERSTAND ALL

EACH LISE BROLES BY WART

CALLOW ROUTHE

WANTIENANCE SCHEDULE.

READ AND UNDERSTAND ALL

READ AND UNDERSTAND ALL

EACH LISE BROLES BY WART

CALLOW ROUTHE

WANTIENANCE SCHEDULE.

READ AND UNDERSTAND

A. CONSULTYOUR PHYSICAN

WANTIENANCE CLEAR OF ALL

WOUNDERY WANTIOUT ADULT

SET TO PREVENT THE

B. TO PREVENT POSSIBLE

THUNK.

CHELORED BY PAURED BY BY STAND

ALLOWED TO USE THES

CHUMPENT WANTIOUT ADULT

SUPERVISION. In ave.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. In ave.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. In ave.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. In ave.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. IN AVE.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. IN AVE.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. IN AVE.

ALLOWED TO USE THES

CHUMPENT WHITHOUT ADULT

SUPERVISION. IN AVE.

ALLOWED TO USE THES

A

021-0003135

	Yearly												×
	v_{qmopy}										×	×	
H	Managy								×	×			
\mathbf{C}	Wookly.				×	×	×	x					
ert pprox ert	$N_{B\hat{I}\hat{I}\hat{B}}$	×	×	×									
ION	COMMERCIAL	Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	Clean; Upholstery	Inspect; Cables or Belts and their tension	Inspect; Accessory Bars and Handles	Inspect; All Decals	Inspect; All nuts and Bolts Tighten if Needed.	Inspect; Anti-Skid Surfaces	Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlubs)	Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	Clean & Wax; All Glossy Finishes	Repeck with Grease Linear Bearings	Replace; Cables, Belts and Connecting Parts.

021-0003008



THIS PAGE WAS INTENTIONALLY LEFT BLANK

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QT
1	010-01C0654	CABLE ASSEMBLY: RPL-5301-A 93 15/16" LG.	1
2	022-01PD2054-A	SEAT PAD ASSEMBLY	1
3	022-01PD2055	UPHOLSTERED HEAD PAD	1
4	022-01PD2058	BACK PAD ASSEMBLY	1
5	022-01PD2058-5	PLASTIC BACK PAD BACKING	1
6	022-01PD2073-5	HEAD PAD PLASTIC BACKING	1
7	026-01X2387	SEAT ASSEMBLY	1
8	026-01PL2124	FOOTPLATE, MOLDED	2
9	026-01X2849	RACHET PULL-PIN ASSEMBLY	1
10	026-01X2975	FOOT PLATE MOUNT ASSEMBLY	2
11	026-01X3292	LIMITING STOP ASSEMBLY	1
12	026-01X3294	REAR UPRIGHT LEFT ASSEMBLY	1
13	026-01X6626	RPL LIFT WEIGHT HORN	2
14	026-01X3308	LINK ASSEMBLY	2
15	026-01X3377	REAR UPRIGHT RIGHT ASSEMBLY	1
16	026-01X3725	TIE-ROD END RIGHT HANDED ASSEMBLY	2
17	026-01X3536	SHAFT, ROCKING LINK	1
18	026-01X3597	CENTER UPRIGHT	1
19	026-01X3598	LIFT ARM ASSEMBLY	1
20	026-01X3601	PRESS ARM RIGHT	1
21	026-01X3602	PRESS ARM LEFT	1
22	026-01X3603	BASE FRAME ASSEMBLY	1
23	026-01X3604	USER SUPPORT FRAME ASSEMBLY	1
24	026-01X5186	LEVELING FOOT (M16X2.0)	2
25	026-01X5415	SWIVEL PULLEY HOUSING	2
26	011-0411001	SET SCREW: 1/4"-28 X .25" LG. (SS)	4
27	012-0103001	16M X 2.0 FLANGED NUT (WZ)	2
29	012-0202001	1/2"-13 FLANGED NUT (WZ)	1
30	013-0001003	.50" CAP WASHER	2
31	014-0012013	BEARING: BALL BEARING Ø2.44" O.D. X Ø1.18" I.D.	4
32	014-0012014	BEARING: FLANGELESS - 25mm I.D.	4
33	014-0012015	BEARING: FLANGELESS Ø1.65" O.D. X Ø.79" I.D. X .47" WIDE	4
34	014-0012017	SNAP RING - 20mm EXTERNAL	4
35	014-0012018	SNAP RING - 25mm EXTERNAL	2
36	014-0012020	BEARING - FLANGELESS BALL 2.44" O.D. X 35MM I.D. X .55"	4
37	014-0015023	EXTERNAL SNAP RING 1.38" DIA.	2
38	014-0019005-1	T SPLIT COLLAR THREADED Ø1.00" I.D. X 20mm	1
39	016-0001003	END CAP 1.50" X 2.50" (BLACK)	1
40	016-0003001	.50" CAP WASHER CAP	2

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
41	018-0002014	CABLE PULLEY: WIDE (BORED HUB) Ø4.50"	2
42	026-01F0316	8" FLNG.	1
43	026-01M0932	ALUMINIUM CAP: Ø1.25" ID	2
44	026-01M0933	ALUMINUM RING: Ø1.25" ID	2
45	026-01X6625	RPL STORAGE WEIGHT HORN	4
46	026-01M2356	END CAP: DOMED Ø 2.75" O.D.	2
47	026-01M2358	30 LB. COUNTERWEIGHT, RUBBER COATED	2
48	026-01M2360	SHAFT - ∅25mm X 4.71" LG.	1
49	026-01M2618	SHAFT- ∅20mm X .52" ID X 3.75" LG.	2
50	026-01M2724	WASHER, 1.88" OD X 1.41" ID X .125" T	2
52	026-01P2907	HEAD BRACKET MOUNT	1
53	026-01P2925	PAD MOUNT BRACKET	2
54	026-01P3962	L-BRKT	1
55	026-01PL0125	E-Z GLIDE PLASTIC SLEEVE	2
56	026-01PL0235-33	Ø1.188" X 14.17" OPEN END GRIP	2
57	026-01PL0264	WEIGHT HORN RUBBER DONUT	2
58	026-01PL2122	OVAL-SHAPED RUBBER FOOT	1
59	026-01PL2131	D-SHAPED RUBBER FOOT	2
60	026-01PL2519	PLASTIC SCUFF GUARD 11.05" LG. WITH RIVETS	1
61	026-01PL2236	TOP CAP W/INSERTS	1
62	026-01PL2246	DUAL HOLE BUMPER 2.05" THICK	3
63	026-01PL2533	RUBBER DONUT FOR PLASTIC WEIGHT HORN	4
64	013-1002008	1/4" X 16mm SAE FLAT WASHER (Ni)	2
65	013-1002010	5/16" SAE FLAT WASHER (Ni)	10
66	013-1002007	3/8" X 22mm FLAT WASHER (Ni)	44
67	013-1002006	1/2" X 27mm SAE FLAT WASHER (Ni)	36
68	013-1006003	3/8" SPLIT LOCK WASHER (Ni)	18
69	013-0402011	3/8" SPLIT LOCK WASHER (SS)	2
71	013-1006001	1/4" SPLIT LOCK WASHER (Ni)	2
72	011-0701083	1/4"-20UNC X 2.50" BHCS (Ni) w/ NYLON PATCH	2
73	011-0007097	1/4"-20UNC X .75" SHCS (BZ)	2
74	011-0701003	5/16"-18UNC X 1.00" BHCS (Ni)	9
76	011-0701004	5/16"-18UNC X 1.25" BHCS (Ni)	2
77	011-0116142	3/8"-16UNC X 1.00" LOW HEAD SHCS (Ni)	1
78	011-0701020	3/8"-16UNC X 1.00" BHCS (Ni)	16
79	011-0401002	3/8"-16UNC X 1.25" BHCS (SS)	2

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
80	011-0701028	3/8"-16UNC X 3.00" BHCS (Ni)	2
81	011-0701027	3/8"-16UNC X 2.75" BHCS (Ni)	4
82	011-0116148	3/8"-16UNC X 2.50" LOW HEAD SHCS (Ni)	2
83	011-0704001	3/8-16UNC X .75" SQUARE HEAD (Ni)	1
84	011-0701047	1/2"-13UNC X 1.00" BHCS (Ni)	4
85	011-0116107	1/2"-13UNC X 1.00" LOW HEAD SHCS (Ni)	4
86	011-0116115	1/2"-13UNC X 3.00" LOW HEAD SHCS (Ni)	2
87	011-0116119	1/2"-13UNC X 4.00" LOW HEAD SHCS (Ni)	2
88	011-0116120	1/2"-13UNC X 4.25" LOW HEAD SHCS (Ni)	2
89	011-0116122	1/2"-13UNC X 4.75" LOW HEAD SHCS (Ni)	2
90	011-0116123	1/2"-13UNC X 5.00" LOW HEAD SHCS (Ni)	2
91	011-0116126	1/2"-13UNC X 5.75" LOW HEAD SHCS (Ni)	1
92	012-0504005	3/8"-16 UNC THIN NYLOCK NUT (Ni)	13
93	012-0504002	1/2"-13 UNC THIN NYLOCK NUT (Ni)	19
94	012-0504011	12mm THICK NYLOCK NUT (Ni)	2
95	021-0003008	DECAL COMMERCIAL MAINTENANCE 1.50 X 6.69	1
96	021-0003093	DECAL MOVING PARTS 1.20" X 2.38" (HOR)	1
97	021-0003113	DECAL PINCH POINT 1.63" X 3.25" (VERTICAL)	1
98	021-0003135	DECAL WARNING 1.50" X 6.69"	1
99	021-0003230	DECAL HOIST 1.625" X 6.0613"	1
100	021-0003320	DECAL 800 LB. WEIGHT RATING (1.63" X 1.63")	1
101	021-0003334	DECAL HOIST 3.88" X 14.45"	2
102	021-0003341	DECAL PINCH POINT 1.07" X 2.13" (HORIZONTAL)	2
104	021-0004032	DECAL ADJUST 1-7 VERTICAL TXT.	1
105	021-0018022	DECAL HOISTFITNESS.COM LOGO	1
106	021-0003690	RPL-5301 CHEST PRESS PLACARD	1
107	SERIAL # DECAL	DECAL HOIST SERIAL # 1.63" X 2.63"	1
108	013-1006008	M12 SPLIT LOCK WASHER (Ni)	6
109	013-1010003	5/16" INTERNAL LOCK WASHER (Ni)	10
110	026-01PL2200	PINETREE PLUG	2
111	026-01PL2532	LONG WEIGHT HORN COVER	4
112	026-01PL2535	WEIGHT HORN END CAP	6
113	011-0701084	3/8"-16UNC X 1.25" BHCS (Ni) W/ DRI-LOC PATCH	6
114	016-0201023	END CAP ∅1.50" (BLACK)	4
115	026-01PL2576	9.25" WEIGHT HORN COVER	2
116	026-01PL0286	ϕ 1.25" END PLUG	2


MAINTENANCE SCHEDULE


ROUTINE	COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean; Upholstery	DAILY	WEEKLY	
Inspect; Cables or Belts and their tension	DAILY	WEEKLY	
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect; All Decals	WEEKLY	3 MONTHS	
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS	
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS	
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS	
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY	
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

Never use ammonia, acid-based, or petroleum-based solvents on any portion of the machine as it may damage the finish.

BOLT SIZING CHART 1/4" HHB 5/16" HHB 3/8" HHB 1/2" HHB RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: **TORQUE RANGE: TORQUE RANGE: TORQUE RANGE:** 6-8 ft-lbs 14-17 ft-lbs 24-30 ft-lbs 60-75 ft-lbs 5/16" BHCS 3/8" BHCS 1/2" BHCS 1/4" BHCS RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE:** TORQUE RANGE: TORQUE RANGE: TORQUE RANGE: 5-7 ft-lbs 11-15 ft-lbs 19-26 ft-lbs 47-65 ft-lbs 1/4" 5/16" 3/8" 1/2" **LOW HEAD LOW HEAD** LOW HEAD LOW HEAD **SHCS SHCS SHCS SHCS** \bigcirc RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: TORQUE RANGE: TORQUE RANGE: **TORQUE RANGE:** 4-6 ft-lbs 9-12 ft-lbs 18-23 ft-lbs 40-50 ft-lbs 1/4" SHCS 5/16" SHCS 3/8" SHCS RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE:** TORQUE RANGE: **TORQUE RANGE:** 11-14 ft-lbs 23-29 ft-lbs 39-49 ft-lbs 3/4" 3/4" 3/ 3/4 0 1/2" FHCS 3/8" FHCS 1/4" FHCS RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: **TORQUE RANGE:** TORQUE RANGE: 47-65 ft-lbs 5-7 ft-lbs 19-26 ft-lbs 3/4" 3/4" 3/4" 3/4 , ~ 0 \sim $^{\circ}$ 3/8" SHSS 5/16" SHSS 1/4" SHSS RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE: TORQUE RANGE: TORQUE RANGE:** 17-22 ft-lbs 8-10 ft-lbs 3-4 ft-lbs

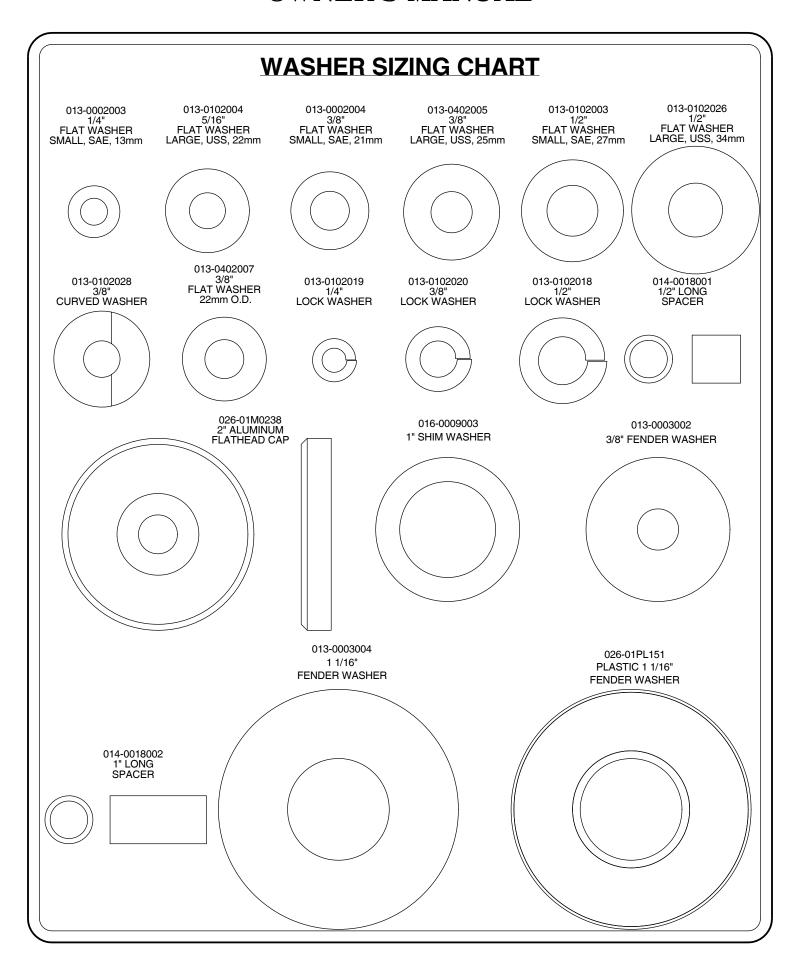

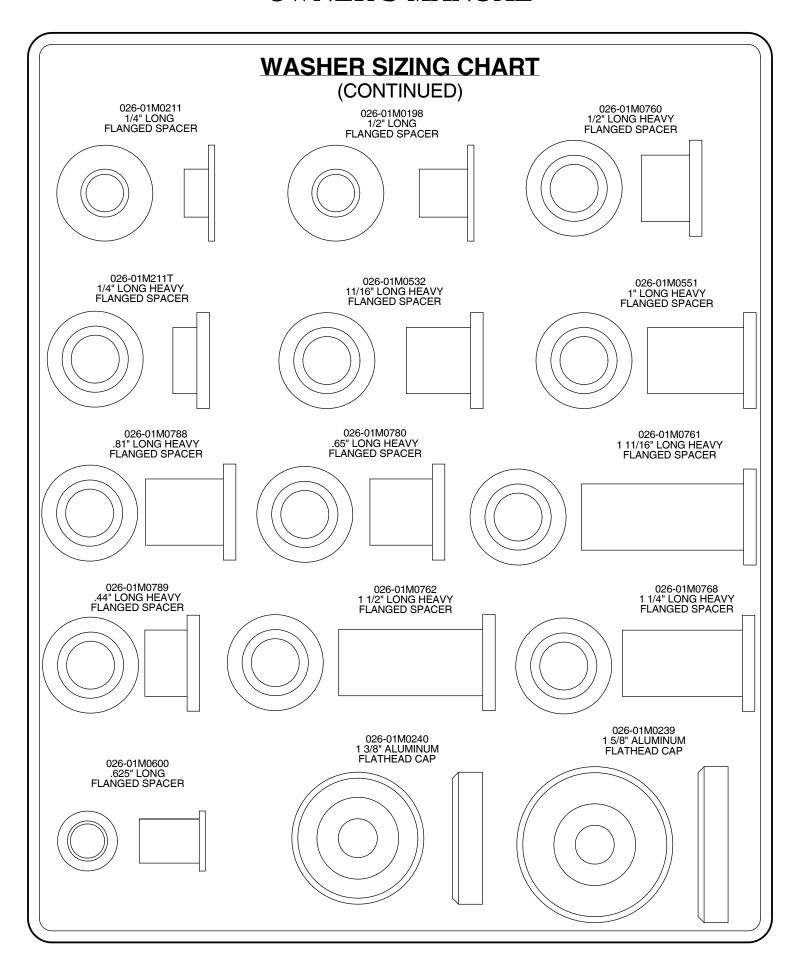

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean; Upholstery	DAILY	WEEKLY	
Inspect; Cables or Belts and their tension	DAILY	WEEKLY	
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect; All Decals	WEEKLY	3 MONTHS	
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS	
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS	
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS	
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY	
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

Never use ammonia, acid-based, or petroleum-based solvents on any portion of the machine as it may damage the finish.

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or warn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

WEIGHT TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your RPL-5301-A HOIST® Fitness System. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your RPL-5301-A HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Enjoy your RPL-5301-A HOIST® Fitness System!

Totals													Exercise	Parc
													S	T
													R	
													₩	-
													S	-
													R	ł
													W	
												_	S	1
													R	-
												_	₩	ļ
												_	\mathbf{s}	$\ $
													R 1	ł
												\dashv	*	ļ
												_	S R	-
													<u>≈</u>	ł
												\dashv	S	-
													R	1
													<u>~</u>	1
												\dashv	$\frac{7}{s}$	ł
													R	1
												1	<u>₹</u>	1
												\dashv	$\frac{\mathbf{s}}{}$	t
													R	1
													*	1
												\dashv	S	t
													R	1
													*	1
												\dashv	S	t
													R	1
												\neg	8	Ĭ
													\mathbf{v}	j
													R	
													*	
													\mathbf{v}	T
													R	
													8	١

WEIGHT TRAINING EXERCISE LOG

S = Sets R = Repetition per set W = Weight used

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit:

www.HOISTFITNESS.com

and click on the Warranty Registration link

Starting from the original date of purchase, normal wear and tear shall be considered as the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts, or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

LIGHT COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts, or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

HOME USE: All malfunctions of grips, paint, and chrome that occur up to ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur up to ten years; all malfunctions of pulleys, bearings, or bushings that occur up to ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE. Refer to the instructions page of your owners manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death! Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

LIGHT COMMERCIAL USE: Our Light Commercial warranty applies to facilities that **DO NOT** charge monthly membership dues and where the equipment would be used by **no more than 50** people per day. Examples of Light Commercial facilities include hotels, apartment complexes, personal training studios, fire stations, police stations, etc., that meet the criteria stated above.

WHAT IS NOT COVERED BY THIS WARRANTY: Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES: Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS: Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems 11900 Community Rd. Poway, CA. 92064 (800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS